




*"Simply Better"*

SKIRTEC GROUP PTY LTD  
 ACN 074 107 805  
 TEL 07 3375 6144  
 FAX 07 3375 6033  
 Email sales@skirtec.com.au  
 HELP LINE 1800 064 435

## INSTALLATION INSTRUCTIONS

### SKIRTEC 2 CHANNEL BENCH DUCT ABD12535

1. Ensure all surfaces to which the duct is to be mounted on are level and straight.
2. Fix base sections to wall / bench using the score lines in both top & bottom channels.
3. If required, use alignment plates in the slots provided. Or, simply butt base sections together. To bond adjoining base sections, use earth continuity rod provided in short sections squeezed into the threaded section of the base.
4. To insert outlet mount boxes where required, cut the barrier to size down to the score line and snap off with snips (Skirtec recommends the use of Wiss Offset snips, M7). Mount Boxes can be inserted adjacent to each other and still maintain segregation. Straighten any distorted barrier section using pliers.
5. Cable and fit off outlets. Fit cover sections as required, using short strips for between adjacent outlets.

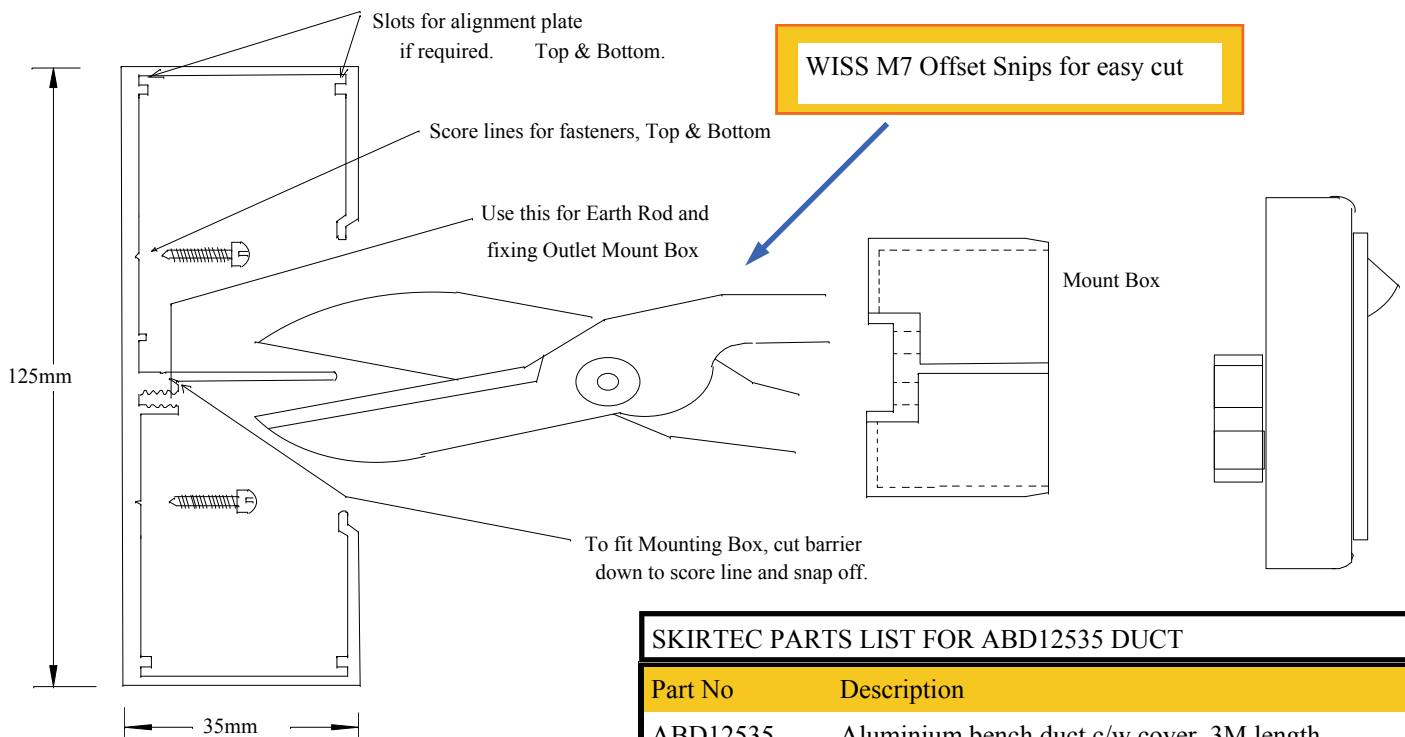

#### SKIRTEC PARTS LIST FOR ABD12535 DUCT

Part No	Description
ABD12535	Aluminium bench duct c/w cover, 3M length
ABD12535-MT	Outlet kit for standard grid plate (1) data or GPO
ABD12535ES	End Stop for bench duct, left or right.
SET UP	Powdercoat set up fee for Special Colours
Colours	Stock colours, clear anodised, grey, white birch